



RV-0

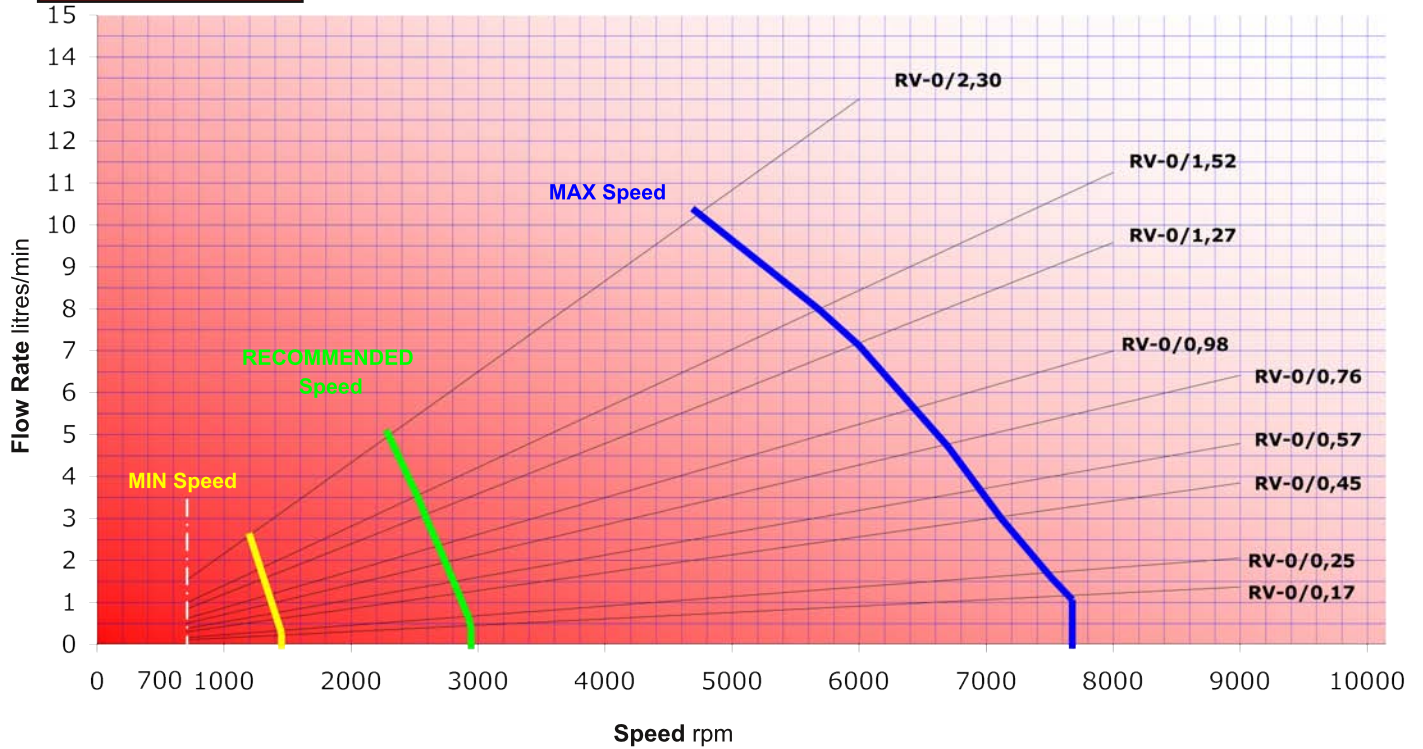

RV-1

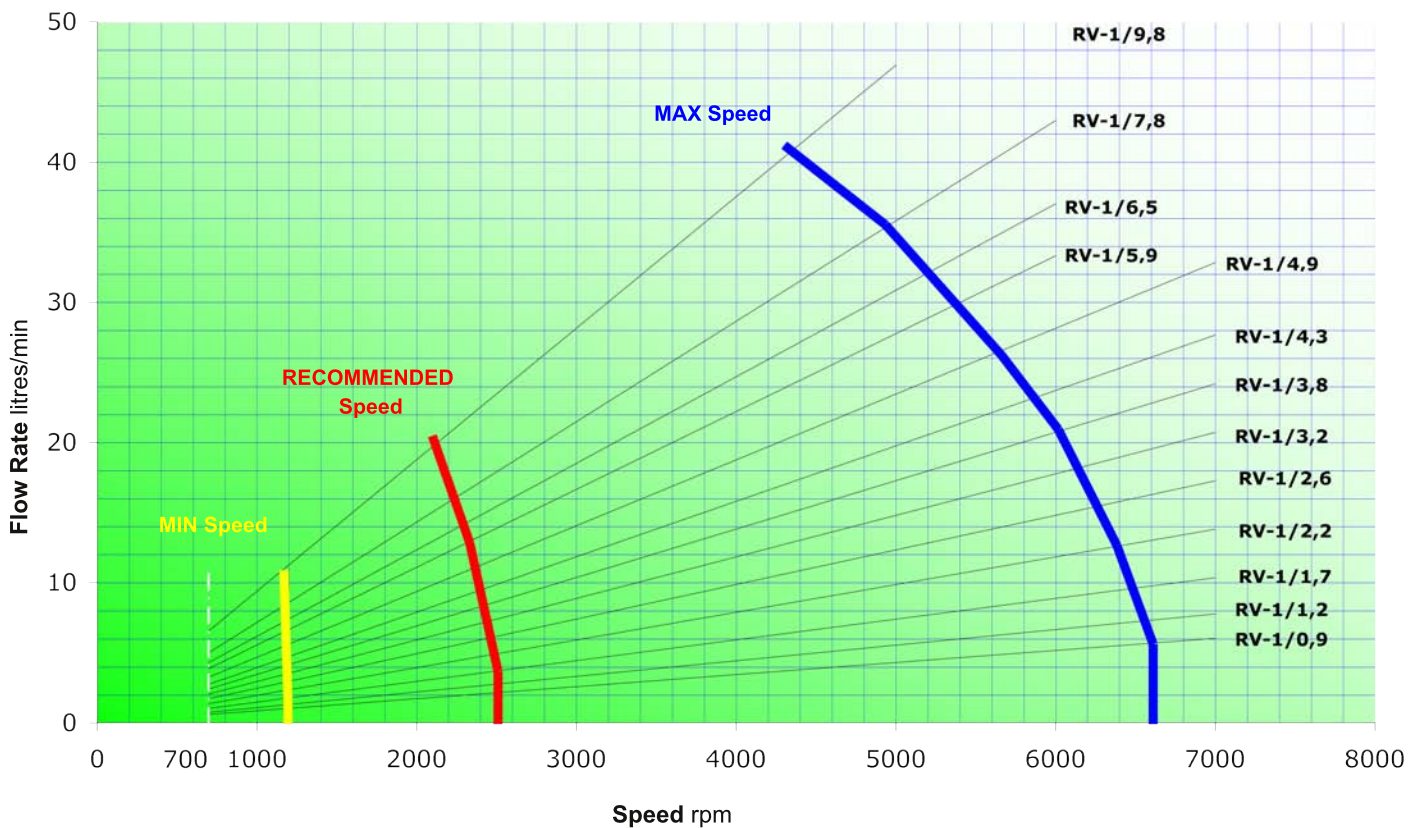

NOTE: the flow divider can work even below the minimum speed, but it's efficiency will be lower
the flow divider can work even over the maximum speed, but it will increase the noise and loss of load